



# SMALL SYSTEM DATA SHEET



## ANALOG inLOOP

Package contains amplifier, power supply, 150' of 20 gauge wire and 6' RCA cable and adapter  
 Power requirements - 100 - 240 volts AC ~ 50/60Hz 18 volt/amps  
 Coverage - IEC 60118-4 compliant as tested at 600 sq ft  
 Inputs - 1 microphone/line with phantom power available. Built in microphone  
 Controls - Tone control. Loop volume control. Power switch.  
 Dimensions - 7" x 2.75" x 3.125" 3 lbs  
 Power Supply Approvals - UL ULC CE



## DIGITAL inLOOP

Package contains amplifier, power supply, 150' of 20 gauge wire and 6' digital optical cable  
 Power requirements - 100 - 240 volts AC ~ 50/60Hz 18 volt/amps  
 Coverage - IEC 60118-4 compliant as tested at 600 sq ft  
 Inputs - Digital optical or coax.  
 Controls - Tone control. Loop volume control. Power switch.  
 Dimensions - 7" x 2.75" x 3.125" 3 lbs  
 Power Supply Approvals - UL ULC CE




## inLOOP 1200

Package contains amplifier, power supply, 200' of 18 gauge wire and 6' digital optical cable  
 Power requirements - 100 - 240 volts AC ~ 50/60Hz 60 volt/amps  
 Coverage - IEC 60118-4 compliant as tested at 1200 sq ft  
 Inputs - 3 - 1 line, 1 mic/line with 5 volts of phantom power, digital optical or coax.  
 Controls - Tone control. Loop volume control.  
 Dimensions - 6" x 4" x 2" 3 lbs  
 Power Supply Approvals - UL ULC CE



## PERSONAL PAD ANTENNA

Package contains Personal loop pad with 33' of 22 gauge wire.  
 Dimensions - 16" x 16" x .125" 1 lbs

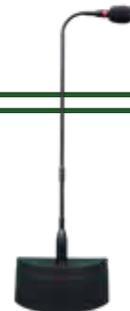

## COUNTER inLOOP

Package contains amplifier, power supply, loop antenna, velcro and microphone.  
 Power requirements - 100 - 240 volts AC ~ 50/60Hz 18 volt/amps  
 Controls - Tone control. Loop volume control. Power switch.  
 Dimensions - 7" x 2.75" x 3.125" 4 lbs  
 Power Supply Approvals - UL ULC CE



**SMALL SYSTEM WARRANTY** - This limited lifetime warranty covers the loop amplifier and enclosure. The loop amplifier is warrantied to be free of defects in material and workmanship for the life of the product under the following schedule and conditions: The warranty does not cover damage from misuse, power surges or improper installation. We will provide ground shipping, and repair systems that meet these criteria for six months. We will repair and provide return shipping from six months to twenty-four months. For the remainder of the life of the product we will repair systems that meet these criteria with the customer providing shipping. Cords, cables and power supplies are warrantied to be free of defects in material and workmanship for a period of one year.

**inLOOP products are made in the USA** Some cables, power supplies and electronic components attached to the circuit boards are not available in our country and have to be imported.

# inLOOP 1200 INSTALLATION INSTRUCTIONS

**STEP 1 - Install the wire** above the ceiling, around the room or under the floor. The wire must form a continuous loop around the listening area. Do not install the loop wire close to and parallel with data lines, telephone, audio, or video cables. Do not install the wire more than 9' above the floor.



**STEP 2 - Connect the wire** Strip 1/2" of plastic from the ends of the loop wire. Loosen the red and black "LOOP WIRE" connectors. Insert one end of the bare wire into the opening in the black terminal and tighten the connector to secure the wire. Insert the other end of the wire into the opening in the red terminal and tighten the connector to secure the wire.

**STEP 3 - Connect the sound source - Use one or multiple connections**



## OPTICAL - DIGITAL AUDIO - COAX


If the TV, stereo or cable box has an OPTICAL or COAX digital output, install the correct cable from this output to the OPTICAL or COAX "DIGITAL" input - Cable color will vary. Slide the switch toward the chosen connection.

**LINE** If the TV, stereo or cable box has a red and white (or black) audio output, install a 1/8" to RCA cable from this output to the "LINE" input.

"LINE INPUT" means an analog signal from a sound source like your TV, audio device or cable box. If the Microphone/LINE INPUT is used for a connection like this make sure the selector button is in the out position.

## MICROPHONE

An external microphone may be plugged into the input and used in place of the built in microphone. Depress the **Mic Power** selector button

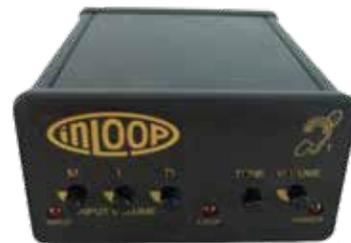

## STEP 4 - Adjust the volume

Plug the power adapter into the wall and the inLOOP 1200.

Turn the knob for the INPUT you have chosen on the front of the unit until the light to the left of the INPUT VOLUME knobs flickers. Turn the VOLUME knob until the LOOP ACTIVITY light flickers. Adjust the TONE as needed.